CEU REQUIREMENT BY LICENSE TYPE

REMINDER: CEUs must be completed during the renewal period and every renewal period is 3 years. To determine if your CEUs count toward your license, determine if the course was completed within 3 years of your current expiration date.

| | General | Select |
|--|-----------|--------|
| Basic Installer: | | |
| 1st renewal (first three years after registration) | 20 | 8 |
| Subsequent renewals (every three year period thereafter) | 8 | 0 |
| | | |
| Advanced Installer: | | |
| Advanced installers do not need to track ba | asic CEUs | |
| 1st renewal (first three years after registration) | 20 | 8 |
| Subsequent renewals (every three year period thereafter) | 12 | 8 |
| | | |
| Inspector: | | |
| 1st renewal (first three years after licensure) | 20 | 8 |
| Subsequent renewals (every three year period thereafter) | 12 | 8 |
| | | |
| Onsite Soil Evaluator: | | |
| 1st renewal (first three years after registration) | 20 | 8 |
| Subsequent renewals (every three year period thereafter) | 12 | 8 |
| | | |
| Percolation Tester: | | |
| 1st renewal (first three years after registration) | 20 | 8 |
| Subsequent renewals (every three year period thereafter) | 8 | 0 |