



MISSOURI DEPARTMENT OF HEALTH AND SENIOR SERVICES  
 STATE PUBLIC HEALTH LABORATORY  
**ALCO-SENSOR IV WITH PRINTER MAINTENANCE REPORT**

**RECEIVED** REPORT #  
 By Carol Day at 4:06 pm, Apr 23, 2014

Complete this report in duplicate at the time of the regular monthly preventative maintenance check, and whenever instrument is repaired. Send copy to Department of Health and Senior Services; retain original in department file.

ALCO SENSOR IV SN 097403	PRINTER SN 096.3580.877	DATE OF INSPECTION 04/15/2014
LOCATION OF INSTRUMENT (STREET AND CITY) 317 BROADWAY, ELSBERRY		TIME OF INSPECTION 2:53 pm

**CHECKLIST:** Place a mark in the box by each item if found to be satisfactory or if operating within established limits. (Write in observed values where determined.) Unmarked items must be corrected before using instrument.

DIGITAL READOUT (ALL ELEMENTS OPERATIONAL)

TEMPERATURE OF ALCO SENSOR (10°C - 40°C)

PRINTER WORKING PROPERLY

TIME AND DATE DISPLAYING PROPERLY

**BREATH ALCOHOL ACCURACY STANDARDS**

SIMULATOR SOLUTION  COMPRESSED ETHANOL-GAS MIXTURE

STANDARD SUPPLIER GUTH LABS LOT # 12170 EXP. DATE 09/05/2014

SIMULATOR TEMPERATURE (34°C ± 0.2°C) 34.0 SIMULATOR SN SD2287 SIMULATOR EXP DATE 02/10/2015

CALIBRATION CHECK – (ONLY ONE STANDARD IS TO BE USED PER MAINTENANCE REPORT)

Run three tests using a standard solution. All three tests must be within ±5% of the standard value and must have a spread of .005 or less. Check the box corresponding to the standard solution being used. (PRINTOUT ATTACHED)

- 0.100% STANDARD - MUST READ BETWEEN 0.095% and 0.105% INCLUSIVE
- 0.080% STANDARD - MUST READ BETWEEN 0.076% and 0.084% INCLUSIVE
- 0.040% STANDARD - MUST READ BETWEEN 0.038% and 0.042% INCLUSIVE

TEST 1 .099

TEST 2 .099

TEST 3 .099

RFI DETECTOR OPERATING

**INDICATE THE NUMBER OF BREATH TESTS IN THE FOLLOWING RANGES SINCE THE LAST MAINTENANCE REPORT:  
 (DO NOT INCLUDE SELF-ADMINISTERED TESTS)**

REFUSALS    1    | (0-.04)    0    | (.05-.09)    0    | (.10-.14)    0    | (.15-.19)    0    | (OVER .19)    0

List any new parts and describe any alteration or modification that was made to restore the instrument to operate satisfactorily and within established limits (use other side if necessary).

**INSPECTING OFFICER**

SIGNATURE 	PRINT NAME ROBERT J BODLEY
TYPE II PERMIT NUMBER/EXPIRATION DATE 240121 03/24/2016	TELEPHONE NUMBER (573) 898-5456

**Return completed report to the:** Breath Alcohol Program, MO Department of Health and Senior Services, Southeast District Office  
 2875 James Boulevard  
 Poplar Bluff, MO 63901

DE TV 10/15/11 1000000000  
Division

TRUST 10/15/11 1000000000  
Type 10/15/11 1000000000  
10/15/11 1000000000  
10/15/11 1000000000




DE TV 10/15/11 1000000000  
Division

TRUST 10/15/11 1000000000  
Type 10/15/11 1000000000  
10/15/11 1000000000  
10/15/11 1000000000



DE TV 10/15/11 1000000000  
Division

TRUST 10/15/11 1000000000  
Type 10/15/11 1000000000  
10/15/11 1000000000  
10/15/11 1000000000

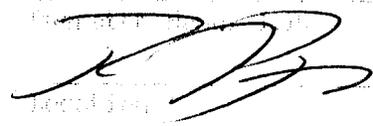

DE TV 10/15/11 1000000000  
Division

TRUST 10/15/11 1000000000  
Type 10/15/11 1000000000  
10/15/11 1000000000  
10/15/11 1000000000





**GUTH LABORATORIES, INC.**

890 NORTH 67th STREET • HARRISBURG, PA 17111-4511 • TELEPHONE: 717-564-6470

## CERTIFICATE OF ANALYSIS

Certified Alcohol Reference Solution for Simulator

Random Samples of Lot Number **12170** of Alcohol Reference Solution for Simulator were analyzed by gas chromatography on **September 11, 2012**, using a Perkin Elmer Gas Chromatograph Autosystem XL S/N: 610N9030209, and found to contain **0.1215%** (w/vol) ethyl alcohol. The expiration date for this lot number is **September 5, 2014** at 11:59 PM.

When used in a calibrated Simulator, operating at  $34^{\circ}\text{C} \pm .2^{\circ}\text{C}$ , this solution will give a breath alcohol analysis instrument reading of **0.100 g/210L  $\pm$  3%**.

The alcohol and water used in this solution were free of test interfering substances.

Ted L. Pauley, President  
GUTH LABORATORIES, INC.

***NIST Traceability:***

*Testing was conducted using Cerilliant Reference Standard lot number FN122211-02 whose values are traceable to NIST.*

*All balances are calibrated annually by an outside agency using NIST traceable weights. Calibration verification is done prior to each use utilizing NIST traceable weights.*



STATE OF MISSOURI  
 DEPARTMENT OF HEALTH AND SENIOR SERVICES  
 BREATH ALCOHOL PROGRAM



**PERMIT  
 TYPE II**


**ROBERT J BODLEY**

is hereby authorized to instruct and supervise operators, train instructors, inspect, calibrate, perform field service and repairs, and operate the following breath analyzer(s):

**ALCO-SENSOR IV WITH PRINTER**

for the determination of the alcoholic content of blood from a sample of expired air. Permit issued under the provisions of sections 577.020 through 577.041, RSMo and 306.111 through 306.119 RSMo.

DATE **3/24/2014**  
 NUMBER **240121**  
 EXPIRES **3/24/2016**

  
 DIRECTOR OF STATE PUBLIC HEALTH LABORATORY  
  
 DIRECTOR OF DEPARTMENT OF HEALTH AND SENIOR SERVICES

 STATE OF MISSOURI  
 DEPARTMENT OF HEALTH AND SENIOR SERVICES  
 BREATH ALCOHOL PROGRAM

**INSTRUMENT OPERATOR CARD**

*The named cardholder is authorized to operate an evidential breath alcohol instrument for the determination of the alcoholic content in breath form of expired air in Missouri.*



Operator BODLEY, ROBERT  
 Permit No 240121  
 Date Issued 3/24/2014 Date Expires 3/24/2016