



MISSOURI DEPARTMENT OF HEALTH AND SENIOR SERVICES
 STATE PUBLIC HEALTH LABORATORY
ALCO-SENSOR IV WITH PRINTER MAINTENANCE REPORT

RECEIVED
 By Carol Day at 11:09 am, Dec 08, 2014

Complete this report in duplicate at the time of the regular monthly preventative maintenance check. Send copy to Department of Health and Senior Services; retain original in department file.

ALCO SENSOR IV SN 097419	PRINTER SN 096.3580.861	DATE OF INSPECTION 12/01/2014
LOCATION OF INSTRUMENT (STREET AND CITY) 301 S Main Palmyra		TIME OF INSPECTION 11:52 am

CHECKLIST: Place a mark in the box by each item if found to be satisfactory or if operating within established limits. (Write in observed values where determined.) Unmarked items must be corrected before using instrument.

DIGITAL READOUT (ALL ELEMENTS OPERATIONAL)

TEMPERATURE OF ALCO SENSOR (10°C - 40°C)

PRINTER WORKING PROPERLY

TIME AND DATE DISPLAYING PROPERLY

BREATH ALCOHOL ACCURACY STANDARDS

SIMULATOR SOLUTION COMPRESSED ETHANOL-GAS MIXTURE

STANDARD SUPPLIER Guth Laboratories LOT # 14110 EXP. DATE 05/01/2016

SIMULATOR TEMPERATURE (34°C ± 0.2°C) 34.0 SIMULATOR SN DR5308 SIMULATOR EXP DATE 07/14/2015

CALIBRATION CHECK – (ONLY ONE STANDARD IS TO BE USED PER MAINTENANCE REPORT)

Run three tests using a standard solution. All three tests must be within ±5% of the standard value and must have a spread of .005 or less. Check the box corresponding to the standard solution being used. (PRINTOUT ATTACHED)

- 0.100% STANDARD - MUST READ BETWEEN 0.095% and 0.105% INCLUSIVE
 0.080% STANDARD - MUST READ BETWEEN 0.076% and 0.084% INCLUSIVE
 0.040% STANDARD - MUST READ BETWEEN 0.038% and 0.042% INCLUSIVE

TEST 1 ➔ .103

TEST 2 ➔ .103

TEST 3 ➔ .103

RFI DETECTOR OPERATING

INDICATE THE NUMBER OF BREATH TESTS IN THE FOLLOWING RANGES SINCE THE LAST MAINTENANCE REPORT: (DO NOT INCLUDE SELF-ADMINISTERED TESTS)

REFUSALS	0	(0-.04)	0	(.05-.09)	0	(.10-.14)	1	(.15-.19)	1	(OVER .19)	0
----------	---	---------	---	-----------	---	-----------	---	-----------	---	------------	---

List any new parts and describe any alteration or modification that was made to restore the instrument to operate satisfactorily and within established limits (use other side if necessary).

INSPECTING OFFICER

SIGNATURE

PRINT NAME
Ronald C. Peer, Jr.

TYPE II PERMIT NUMBER/EXPIRATION DATE
240306/07-22-2016

TELEPHONE NUMBER
(573) 769-5540

Return completed report to the: Breath Alcohol Program, MO Department of Health and Senior Services, Southeast District Office
 2875 James Boulevard
 Poplar Bluff, MO 63901

AS IV Serial no: 097419
Version no: 532B

TEST RECORD 00100

Temp Date Time 210L ^{s/}

Air Blank:
12/01/14 11:52 .000
Calibration Check:
22 12/01/14 11:52 .103

Subject Name

CALIBRATION CHECK

Subject I.D.

Operator Name, I.D.

Ronald C Bay 501

Location

Pacurus PD

AS IV Serial no: 097419
Version no: 532B

TEST RECORD 00101

Temp Date Time 210L ^{s/}

Air Blank:
12/01/14 11:54 .000
Calibration Check:
23 12/01/14 11:54 .103

Subject Name

CALIBRATION CHECK

Subject I.D.

Operator Name, I.D.

Ronald C Bay 501

Location

Pacurus PD

AS IV Serial no: 097419
Version no: 532B

TEST RECORD 00102

Temp Date Time 210L ^{s/}

Air Blank:
12/01/14 11:55 .000
Calibration Check:
24 12/01/14 11:55 .103

Subject Name

CALIBRATION CHECK

Subject I.D.

Operator Name, I.D.

Ronald C Bay 501

Location

Pacurus PD

AS IV Serial no: 097419
Version no: 532B

TEST RECORD 00103

Temp Date Time 210L ^{s/}

VOID: RFI
12 12/01/14 11:56

Subject Name

RFI TEST

Subject I.D.

Operator Name, I.D.

Ronald C Bay 501

Location

Pacurus PD



GUTH LABORATORIES, INC.

590 NORTH 67th STREET • HARRISBURG, PA 17111-4511 • TELEPHONE: 717-664-5470

CERTIFICATE OF ANALYSIS

Certified Alcohol Reference Solution for Simulator

Random Samples of Lot Number **14110** of Alcohol Reference Solution for Simulator were analyzed by gas chromatography on **May 5, 2014**, using a Perkin Elmer Gas Chromatograph Autosystem XL S/N: 610N9030209, and found to contain **0.1206%** (w/vol) ethyl alcohol. The expiration date for this lot number is **May 1, 2016** at 11:59 PM.

When used in a calibrated Simulator, operating at $34^{\circ}\text{C} \pm .2^{\circ}\text{C}$, this solution will give a breath alcohol analysis instrument reading of $0.100 \text{ g}/210\text{L} \pm 3\%$.


The alcohol and water used in this solution were free of test interfering substances.

Ted L. Pauley, President
GUTH LABORATORIES, INC.

NIST Traceability:

Testing was conducted using Cerilliant Reference Standard lot number FN122211-02 whose values are traceable to NIST.

All balances are calibrated annually by an outside agency using NIST traceable weights. Calibration verification is done prior to each use utilizing NIST traceable weights.

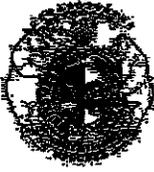

STATE OF MISSOURI
DEPARTMENT OF HEALTH AND SENIOR SERVICES
BREATH ALCOHOL PROGRAM



PERMIT
TYPE II

RONALD C PEER

is hereby authorized to instruct and supervise operators, train instructors, inspect, calibrate, perform field service and repairs, and operate the following breath analyzer(s):

ALCO-SENSOR IV WITH PRINTER

for the determination of the alcoholic content of breath from a sample of expired air. Permit issued under the provisions of sections 572.020 through 572.041, RSMo and 501.111 through 501.115 RSMo.

DATE 7/22/2014

NUMBER 240306

EXPIRES 7/22/2016

MS-2008-07-14-10

[Signature]

DIRECTOR OF STATE PUBLIC HEALTH LABORATORY

[Signature]

acting director


DIRECTOR OF DEPARTMENT OF HEALTH AND SENIOR SERVICES

LAB-502-10

STATE OF MISSOURI
DEPARTMENT OF HEALTH AND SENIOR SERVICES
BREATH ALCOHOL PROGRAM

INSTRUMENT OPERATOR CARD

The named cardholder is authorized to operate an evidential breath alcohol instrument for the determination of the alcoholic content in breath form of expired air in Missouri.

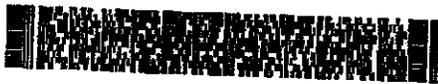


Operator PEER, RONALD
Permit No 240306
Date Issued 7/22/2014 Date Expires 7/22/2016



Simulator Calibration Report

This calibration report is to certify the alcohol reference simulator listed below has been examined and tested using standards traceable to the National Institute of Standards and Technology (NIST) in accordance with the standards set by the Missouri Department of Health and Senior Services Rules and Regulations: 19 CSR 25-30.051 (4).

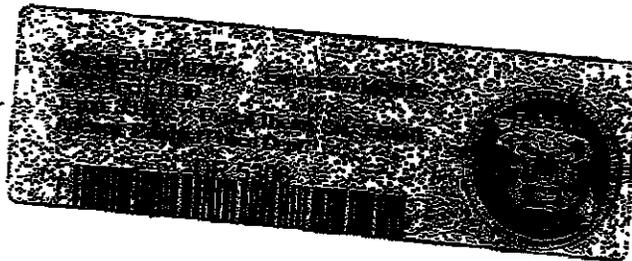

Technician Printed Name: Donald D. DeBeard

Technician Signature: Donald D. DeBeard

Date: 07/14/2014

Contact: Missouri Safety Center
Breath-Alcohol Instrument Training Program
660-543-4834