



DATAMASTER MAINTENANCE REPORT

REVIEWED
 By Carol Day at 11:37 am, Feb 05, 2014 #6

Complete this report at the time of the regular monthly preventive maintenance check (not to exceed 35 days).
 Complete this report whenever the instrument is serviced or repaired and whenever it is placed into service.
 Retain the original and send a copy within 15 days to the Breath Alcohol Program, DHSS.

DATAMASTER SN 204166	NAME OF AGENCY Missouri State Highway Patrol	DATE OF INSPECTION 01/12/2014
LOCATION OF INSTRUMENT (STREET AND CITY) Lafayette County Jail, 107 South 11th Street, Lexington, MO		TIME OF INSPECTION 9:12 am

CHECKLIST: Place a mark in the box by each item if found to be satisfactory or if operating within established limits. (Write in observed values where determined.) Unmarked items must be corrected before using instrument.

<input checked="" type="checkbox"/> DIAGNOSTIC CHECK (PRINTOUT ATTACHED)	DATE AND TIME (from printout) 01-12-2014 9:12 AM
<input checked="" type="checkbox"/> COMPUTER	<input checked="" type="checkbox"/> DETECTOR
<input checked="" type="checkbox"/> PROGRAM	<input checked="" type="checkbox"/> FILTERS
<input checked="" type="checkbox"/> HEATERS SAMPLE CHAMBER 50 °C	<input checked="" type="checkbox"/> QUARTZ STANDARD
<input checked="" type="checkbox"/> FLOW DETECTOR	<input checked="" type="checkbox"/> CALIBRATION
<input checked="" type="checkbox"/> PUMP HIGH SPEED	<input checked="" type="checkbox"/> PRINTER

<input checked="" type="checkbox"/> INDICATOR LIGHTS
<input checked="" type="checkbox"/> SIMULATOR SOLUTION SUPPLIER RepCo Marketing Inc. LOT # 13001 EXP. DATE 03/07/2015
<input checked="" type="checkbox"/> SIMULATOR TEMP (34°C ± 0.2°C) 34.11 °C SIMULATOR SN G11049 EXP. DATE 08/08/2014

CALIBRATION CHECK – (ONLY ONE STANDARD IS TO BE USED PER MAINTENANCE REPORT)

Run three tests using a standard solution. All three tests must be within ±5% of the standard value and must have a spread of .005 or less. Mark the box corresponding to the standard solution being used. (PRINTOUT ATTACHED)

0.100% STANDARD - MUST READ BETWEEN 0.095% AND 0.105% INCLUSIVE
 0.080% STANDARD - MUST READ BETWEEN 0.076% AND 0.084% INCLUSIVE
 0.040% STANDARD - MUST READ BETWEEN 0.038% AND 0.042% INCLUSIVE

TEST 1 ☉ .105	TEST 2 ☉ .104	TEST 3 ☉ .104
---------------	---------------	---------------

PERFORM R.F.I. TEST (PRINTOUT ATTACHED)

**INDICATE THE NUMBER OF BREATH TESTS IN THE FOLLOWING RANGES SINCE THE LAST MAINTENANCE REPORT:
 (DO NOT INCLUDE SELF-ADMINISTERED TESTS)**

REFUSALS	(0-.04) 6	(.05-.09) 0	(.10-.14) 1	(.15-.19) 0	OVER .19 2
----------	-----------	-------------	-------------	-------------	------------

LIST ANY NEW PARTS AND DESCRIBE ANY ALTERATION OR MODIFICATION THAT WAS MADE TO RESTORE THE INSTRUMENT TO OPERATE SATISFACTORILY AND WITHIN ESTABLISHED LIMITS (USE OTHER SIDE IF NECESSARY).

INSPECTING OFFICER	
SIGNATURE <i>E. A. Lusk</i>	PRINT FULL NAME Elizabeth A. Lusk
TYPE II PERMIT NUMBER/EXPIRATION DATE 230024 02-08-2015	TELEPHONE NUMBER (816) 622-0800

RETURN COMPLETED REPORT TO THE: Breath Alcohol Program, MO Department of Health and Senior Services, Southeast District Office
 2875 James Blvd.
 Poplar Bluff, MO 63901

CERTIFICATE OF ANALYSIS

MANUFACTURER AND SUPPLIER: RepCo Marketing, Inc.

LOT NUMBER: 13001

EXPIRATION DATE: March 7, 2015 at 11:59 p.m.

RepCo Marketing, Inc. certifies the following:


RepCo Marketing, Inc. manufactured, tested and supplied Lot Number 13001 of Alcohol Certified Solution for simulators. Random samples of said lot number were analyzed by an independent laboratory utilizing a gas chromatograph and found to contain .1215 gms/dl +/-0.003 gms/dl wt/vol ethanol (95% Confidence).

The alcohol and distilled water used in the solution were found to be free of any interfering substance.

This solution will produce a vapor alcohol value of .100 +/-3% gms/210L Breath when heated to 34 Degrees Celsius +/-0.2 Degrees Celsius in a simulator (95% Confidence).

The date of manufacture for this lot number is March 8, 2013
The expiration date for this lot number is March 7, 2015 at
11:59 p.m.


This document is a true representation of the original Certificate of Analysis.



Cecil B. Garner, President
RepCo Marketing, Inc.



STATE OF MISSOURI
DEPARTMENT OF HEALTH AND SENIOR SERVICES
BREATH ALCOHOL PROGRAM

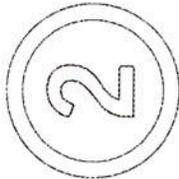

**PERMIT
TYPE II**

ELIZABETH A LUSK

is hereby authorized to instruct and supervise operators, train instructors, inspect, calibrate, perform field service and repairs, and operate the following breath analyzer(s):

DATAMASTER

for the determination of the alcoholic content of blood from a sample of expired air. Permit issued under the provisions of sections 577.020 through 577.041, RSMo and 306.111 through 306.119 RSMo.

DATE 02/08/2013
NUMBER 230024
EXPIRES 02/08/2015

W. A. Lusk

DIRECTOR OF STATE PUBLIC HEALTH LABORATORY

Dorel Vesterly

Acting Director

DIRECTOR OF DEPARTMENT OF HEALTH AND SENIOR SERVICES

LAB-4 (R6-10)

BAC DataMaster
Evidence Ticket

MISSOURI STATE HIGHWAY PATROL

BAC DATAMASTER SERIAL NUMBER 204166
01/12/14

TESTING OFFICER:

LUSK/E/A

OFFICER I.D.: 588

PERMIT NUMBER: 230024

EXPIRATION DATE: 02/08/15

MISCELLANEOUS DATA:

JAN 14

NA

--- SUPERVISOR MODE ---

BLANK TEST	.000	09:22
INTERNAL STANDARD	VERIFIED	09:22
EXTERNAL STANDARD	.105	09:22
BLANK TEST	.000	09:23
EXTERNAL STANDARD	.104	09:23
BLANK TEST	.000	09:24
EXTERNAL STANDARD	.104	09:24
BLANK TEST	.000	09:25

N = 3

SIM. = .1

AVG. = .1043

Operator Signature



BAC DataMaster
Evidence Ticket

MISSOURI STATE HIGHWAY PATROL

BAC DATAMASTER SERIAL NUMBER 204166
01/12/14

ARREST TIME: 00:30

SUBJECT NAME:

DOE/JANE

DOB: 09/23/78 SEX: F

STATE/D.L.: NA/NA

ARRESTING OFFICER:

NA

OFFICER I.D.:

TESTING OFFICER:

LUSK/E/A

OFFICER I.D.: 588

PERMIT NUMBER: 230024

EXPIRATION DATE: 02/08/15

MISCELLANEOUS DATA:

RFI TEST

NA

--- BREATH ANALYSIS ---

RADIO INTERFERENCE

Operator Signature



Face This Side Down - This Edge In First

BAC DataMaster
Evidence Ticket

MISSOURI STATE HIGHWAY PATROL

BAC DATAMASTER SERIAL NUMBER 204166

01/12/14

09:12

--- DIAGNOSTIC CHECK ---

COMPUTER: OKAY

PROGRAM (04-07-2009): OKAY

HEATERS
SAMPLE CHAMBER: 50c

FLOW DETECTOR: OKAY

PUMP
HIGH SPEED: OKAY

DETECTOR: OKAY

FILTERS: OKAY

QUARTZ STANDARD: OKAY

CALIBRATION: OKAY

PRINTER TEST

!"#\$%&'()*+,-./0123456789:;<=>?@ABCDEFGH
HIJKLMNOPQRSTUVWXYZ[\]^_`abcdefghijklmnop
qrstuvwxyz{|}~

Operator Signature

