



MISSOURI DEPARTMENT OF HEALTH AND SENIOR SERVICES  
STATE PUBLIC HEALTH LABORATORY  
BREATH ALCOHOL PROGRAM

INTOX DMT MAINTENANCE REPORT

received 10/11/14-cd

REPORT #1

Complete this report at the time of the regular monthly preventive maintenance check (not to exceed 35 days)  
Complete this report whenever the instrument is serviced or repaired and whenever it is placed into service  
Retain the original and send a copy within 15 days to the Breath Alcohol Program, DHSS.

**REVIEWED**  
By Carol Day at 2:28 pm, Nov 13, 2014

INTOX DMT SN <b>500005</b>	NAME OF AGENCY <b>St. Louis County Police Department</b>	DATE OF INSPECTION <b>10/07/2014</b>
LOCATION OF INSTRUMENT (STREET AND CITY) <b>West County Precinct 232 Vance Rd, Valley Park MO</b>		TIME OF INSPECTION <b>12:29:55</b>

CHECKLIST: Place a mark in the box by each item if found to be satisfactory or is operating within established limits. (Write in observed values where determined). Unmarked items must be corrected before using instrument.

**DIAGNOSTIC RECORD**

DATE AND TIME <u>10/07/2014 12:29:57</u>	<input checked="" type="checkbox"/> DETECTOR
<input checked="" type="checkbox"/> PROGRAM	<input checked="" type="checkbox"/> FILTER 1
<input checked="" type="checkbox"/> SAMPLE CHAMBER <u>48.7°C</u>	<input checked="" type="checkbox"/> FILTER 2
<input checked="" type="checkbox"/> BREATH TUBE <u>47.1°C</u>	<input checked="" type="checkbox"/> FILTER 3
<input checked="" type="checkbox"/> PUMP	<input checked="" type="checkbox"/> INTERNAL STANDARD

**BREATH ANALYZER ACCURACY STANDARDS**

SIMULATOR STANDARD       COMPRESSED ETHANOL-GAS MIXTURE

STANDARD SUPPLIER GUTH      LOT # 14030      EXP. DATE 01/20/2016

SIMULATOR TEMP (34°C ± 0.2°C) 34.0      SIMULATOR SN SD2689      SIMULATOR EXP DATE 07/17/2015

**CALIBRATION CHECK - (ONLY ONE STANDARD IS TO BE USED PER MAINTENANCE REPORT)**  
Run three tests using a standard. All three tests must be within ±5% of the standard value and must have a spread of .005 or less. Mark the box corresponding to the standard being used.

0.10% STANDARD - MUST READ BETWEEN 0.095% AND 0.105% INCLUSIVE

0.08% STANDARD - MUST READ BETWEEN 0.076% AND 0.084% INCLUSIVE

0.04% STANDARD - MUST READ BETWEEN 0.038% AND 0.042% INCLUSIVE

TEST 1: 0.102      TEST 2: 0.102      TEST 3: 0.102

**PERFORM R.F.I. TEST**

INDICATE THE NUMBER OF BREATH TESTS IN THE FOLLOWING RANGES SINCE THE LAST MAINTENANCE REPORT:

REFUSALS: 1	0-.04: 1	.05-.09: 1	.10-.14: 1	.15-.19: 2	OVER .19: 1
-------------	----------	------------	------------	------------	-------------

LIST ANY NEW PARTS AND DESCRIBE ANY ALTERATION OR MODIFICATION THAT WAS MADE TO RESTORE THE INSTRUMENT TO OPERATE SATISFACTORILY AND WITHIN ESTABLISHED LIMITS (USE OTHER SIDE IF NECESSARY)

---



---



---



---

**INSPECTING OFFICER**

SIGNATURE <i>PO D ROSE</i>	PRINT FULL NAME <b>PO D ROSE</b>
TYPE II PERMIT NUMBER <b>230253</b>	EXPIRATION DATE <b>11/12/2015</b>
	TELEPHONE NUMBER <b>314-889-2341</b>

RETURN COMPLETED REPORT TO THE Breath Alcohol Program, MO Department of Health and Senior Services  
Southeast District Office  
2875 James Blvd, Poplar Bluff, MO 63901



## GUTH LABORATORIES, INC.

590 NORTH 87th STREET • HARRISBURG, PA 17111-4511 • TELEPHONE: 717-564-5470

### CERTIFICATE OF ANALYSIS

Certified Alcohol Reference Solution for Simulator

Random Samples of Lot Number 14030 of Alcohol Reference Solution for Simulator were analyzed by gas chromatography on January 22, 2014, using a Perkin Elmer Gas Chromatograph Autosystem XL S/N: 610N9030209, and found to contain 0.1215% (w/vol) ethyl alcohol. The expiration date for this lot number is January 20, 2016 at 11:59 PM.

When used in a calibrated Simulator, operating at 34°C +/- .2°C, this solution will give a breath alcohol analysis instrument reading of 0.100 g/210L +/- 3%.

The alcohol and water used in this solution were free of test interfering substances.

Ted L. Pauley, President  
GUTH LABORATORIES, INC.

***NIST Traceability:***

*Testing was conducted using Cerilliant Reference Standard lot number FN122211-02 whose values are traceable to NIST.*

*All balances are calibrated annually by an outside agency using NIST traceable weights. Calibration verification is done prior to each use utilizing NIST traceable weights.*



## Simulator Calibration Report

This calibration report is to certify the alcohol reference simulator listed below has been examined and tested using standards traceable to the National Institute of Standards and Technology (NIST) in accordance with the standards set by the Missouri Department of Health and Senior Services Rules and Regulations:  
19 CSR 25-30.051 (4).



Technician Printed Name: Donald D. DeBoard


Technician Signature: *Donald D. DeBoard*

Date: 7-17-2014

Contact: Missouri Safety Center

Breath-Alcohol Instrument Training Program

660-543-4834

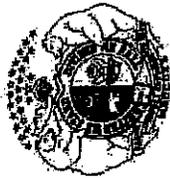

STATE OF MISSOURI  
DEPARTMENT OF HEALTH AND SENIOR SERVICES  
BREATH ALCOHOL PROGRAM

2

**PERMIT**  
**TYPE II**

**DAVID M ROSE**

is hereby authorized to instruct and supervise operators, train instructors, inspect, calibrate, perform field service and repairs, and operate the following breath analyzer(s):

**DATAMASTER, INTOX DMT, ALCO-SENSOR IV W/PRINTER**

for the determination of the alcoholic content of blood from a sample of expired air. Permit issued under the provisions of sections 577.020 through 577.041, RSMo and 306.111 through 306.119 RSMo.

DATE 11/12/2013

NUMBER 230253

EXPIRES 11/12/2015

MOI 580-0771 (6-10)

*David Vesterberg*

DIRECTOR OF STATE PUBLIC HEALTH LABORATORY

*David Vesterberg*

acting director  
DIRECTOR OF DEPARTMENT OF HEALTH AND SENIOR SERVICES

LAB-4 (R6-10)