



ALCO SENSOR IV WITH PRINTER MAINTENANCE REPORT

**RECEIVED**  
By Carol Day at 7:50 am, Feb 02, 2015

Complete this report in duplicate at the time of the regular monthly preventative maintenance check.  
Send copy to Department of Health and Senior Services; retain original in department file.

ALCO SENSOR IV SN 097438	PRINTER SN 096.3580.921	DATE OF INSPECTION 01/16/2015
LOCATION OF INSTRUMENT (STREET AND CITY) 700 West Main Street, Willow Springs		TIME OF INSPECTION 6:13 am

**CHECKLIST:** Place a mark in the box by each item if found to be satisfactory or if operating within established limits. (Write in observed values where determined.) Unmarked items must be corrected before using instrument.

DIGITAL READOUT (ALL ELEMENTS OPERATIONAL)

TEMPERATURE OF ALCO SENSOR (10°C - 40°C) 22

PRINTER WORKING PROPERLY

TIME AND DATE DISPLAYING PROPERLY 01/16/15 06:13

**BREATH ALCOHOL ACCURACY STANDARDS**

SIMULATOR SOLUTION  COMPRESSED ETHANOL-GAS MIXTURE

STANDARD SUPPLIER Guth Labs LOT # 13280 EXP. DATE 10/16/2015

SIMULATOR TEMPERATURE (34°C ± 0.2°C) 34.0c SIMULATOR SN SD2239 SIMULATOR EXP DATE 06/05/2015

CALIBRATION CHECK – (ONLY ONE STANDARD IS TO BE USED PER MAINTENANCE REPORT)  
Run three tests using a standard solution. All three tests must be within ±5% of the standard value and must have a spread of .005 or less. Check the box corresponding to the standard solution being used. (PRINTOUT ATTACHED)

0.100% STANDARD - MUST READ BETWEEN 0.095% and 0.105% INCLUSIVE

0.080% STANDARD - MUST READ BETWEEN 0.076% and 0.084% INCLUSIVE

0.040% STANDARD - MUST READ BETWEEN 0.038% and 0.042% INCLUSIVE

TEST 1  .100	TEST 2  .101	TEST 3  .101
--------------	--------------	--------------

RFI DETECTOR OPERATING


INDICATE THE NUMBER OF BREATH TESTS IN THE FOLLOWING RANGES SINCE THE LAST MAINTENANCE REPORT:  
(DO NOT INCLUDE SELF-ADMINISTERED TESTS)

REFUSALS	0	(0-.04)	0	(.05-.09)	0	(.10-.14)	0	(.15-.19)	0	(OVER .19)	0
----------	---	---------	---	-----------	---	-----------	---	-----------	---	------------	---

List any new parts and describe any alteration or modification that was made to restore the instrument to operate satisfactorily and within established limits (use other side if necessary).

<b>INSPECTING OFFICER</b>	
SIGNATURE 	PRINT NAME Bryan Wickham
TYPE II PERMIT NUMBER/EXPIRATION DATE 240300 07/15/2016	TELEPHONE NUMBER (417) 469-3158

Return completed report to the: Breath Alcohol Program, MO Department of Health and Senior Services, Southeast District Office  
2875 James Boulevard  
Poplar Bluff, MO 63901

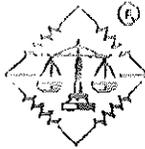

GUTH LABORATORIES, INC.

500 NORTH 6TH STREET • HARRISBURG, PA 17111-4511 • TELEPHONE: 717-564-6470

## CERTIFICATE OF ANALYSIS

Certified Alcohol Reference Solution for Simulator

Random Samples of Lot Number 13280 of Alcohol Reference Solution for Simulator were analyzed by gas chromatography on October 18, 2013, using a Perkin Elmer Gas Chromatograph Autosystem XL S/N: 610N9030209, and found to contain 0.1217% (w/vol) ethyl alcohol. The expiration date for this lot number is October 16, 2015 at 11:59 PM.

When used in a calibrated Simulator, operating at 34°C +/- .2°C, this solution will give a breath alcohol analysis instrument reading of 0.100 g/210L +/- 3%.

The alcohol and water used in this solution were free of test interfering substances.

Ted L. Pauley, President  
GUTH LABORATORIES, INC.

***NIST Traceability:***

*Testing was conducted using Cerilliant Reference Standard lot number FN122211-02 whose values are traceable to NIST.*

*All balances are calibrated annually by an outside agency using NIST traceable weights. Calibration verification is done prior to each use utilizing NIST traceable weights.*

NU Serial no: 697438  
Version no: 532B

TEST RECORD 00073

Temp Date Time 210L  
s/

Blank

01/16/15 06:13 .000

Calibration Check:  
23 01/16/15 06:13 .100

Subject Name

Operator Name, I.D.

B. Wickham

405

AS IU Serial no: 697438  
Version no: 532B

TEST RECORD 00074

Temp Date Time 210L  
s/

Air Blank:

01/16/15 06:15 .000

Calibration Check:  
23 01/16/15 06:15 .101

Subject Name

Operator Name, I.D.

B. Wickham

405

AS IU Serial no: 697438  
Version no: 532B

TEST RECORD 00075

Temp Date Time 210L  
s/

Air Blank:

01/16/15 06:16 .000

Calibration Check:  
23 01/16/15 06:16 .101

Subject Name

Operator Name, I.D.

B. Wickham

405

AS IU Serial no: 697438  
Version no: 532B

TEST RECORD 00076

Temp Date Time 210L  
s/

UNIT: KFI

12 01/16/15 06:18

Subject Name

Operator Name, I.D.

B. Wickham

405



STATE OF MISSOURI  
 DEPARTMENT OF HEALTH AND SENIOR SERVICES  
 BREATH ALCOHOL PROGRAM



**PERMIT  
 TYPE II**

**BRYAN K WICKHAM**

is hereby authorized to instruct and supervise operators, train instructors, inspect, calibrate, perform field service and repairs, and operate the following breath analyzer(s):

**ALCO-SENSOR IV WITH PRINTER**

for the determination of the alcoholic content of blood from a sample of expired air. Permit issued under the provisions of sections 577.020 through 577.041, RSMo and 306.111 through 306.119 RSMo.

DATE 7/15/2014

NUMBER 240300

EXPIRES 7/15/2016

MO 680-0771 (8-10)

DIRECTOR OF STATE PUBLIC HEALTH LABORATORY

DIRECTOR OF DEPARTMENT OF HEALTH AND SENIOR SERVICES

LAB-4 (R6-10)



**STATE OF MISSOURI**  
 DEPARTMENT OF HEALTH AND SENIOR SERVICES  
 BREATH ALCOHOL PROGRAM

**INSTRUMENT OPERATOR CARD**

*The named cardholder is authorized to operate an evidential breath alcohol instrument for the determination of the alcoholic content in breath form of expired air in Missouri.*



Operator **WICKHAM, BRYAN**  
 Permit No **240300**  
 Date Issued **7/15/2014** Date Expires **7/15/2016**