



MISSOURI DEPARTMENT OF HEALTH AND SENIOR SERVICES  
 STATE PUBLIC HEALTH LABORATORY  
 BREATH ALCOHOL PROGRAM  
**DATAMASTER MAINTENANCE REPORT**

**RECEIVED** REPORT #6  
 By Carol Day at 6:30 am, Feb 10, 2015

Complete this report at the time of the regular monthly preventive maintenance check (not to exceed 35 days).  
 Complete this report whenever the instrument is serviced or repaired and whenever it is placed into service.  
 Retain the original and send a copy within 15 days to the Breath Alcohol Program, DHSS.

DATAMASTER SN 204145	NAME OF AGENCY MSHP	DATE OF INSPECTION 01/30/2015
LOCATION OF INSTRUMENT (STREET AND CITY) Nodaway County Sheriff's Office, Maryville, Missouri		TIME OF INSPECTION 9:19 pm

**CHECKLIST:** Place a mark in the box by each item if found to be satisfactory or if operating within established limits. (Write in observed values where determined.) Unmarked items must be corrected before using instrument.

<input checked="" type="checkbox"/> DIAGNOSTIC CHECK (PRINTOUT ATTACHED)	DATE AND TIME (from printout) 01/30/2015, 21:19
<input checked="" type="checkbox"/> COMPUTER	<input checked="" type="checkbox"/> DETECTOR
<input checked="" type="checkbox"/> PROGRAM	<input checked="" type="checkbox"/> FILTERS
<input checked="" type="checkbox"/> HEATERS SAMPLE CHAMBER 50°C	<input checked="" type="checkbox"/> QUARTZ STANDARD
<input checked="" type="checkbox"/> FLOW DETECTOR	<input checked="" type="checkbox"/> CALIBRATION
<input checked="" type="checkbox"/> PUMP HIGH SPEED	<input checked="" type="checkbox"/> PRINTER

INDICATOR LIGHTS

SIMULATOR SOLUTION SUPPLIER RepCo Marketing Inc. LOT # 13290 EXP. DATE 10/29/2015

SIMULATOR TEMP (34°C ± 0.2°C) 34.01 °C SIMULATOR SN G8005 EXP. DATE 07/14/2015

CALIBRATION CHECK - (ONLY ONE STANDARD IS TO BE USED PER MAINTENANCE REPORT)  
 Run three tests using a standard solution. All three tests must be within ±5% of the standard value and must have a spread of .005 or less. Mark the box corresponding to the standard solution being used. (PRINTOUT ATTACHED)

0.100% STANDARD - MUST READ BETWEEN 0.095% AND 0.105% INCLUSIVE  
 0.080% STANDARD - MUST READ BETWEEN 0.076% AND 0.084% INCLUSIVE  
 0.040% STANDARD - MUST READ BETWEEN 0.038% AND 0.042% INCLUSIVE

TEST 1 100	TEST 2 .101	TEST 3 .101
------------	-------------	-------------

PERFORM R.F.I. TEST (PRINTOUT ATTACHED)

INDICATE THE NUMBER OF BREATH TESTS IN THE FOLLOWING RANGES SINCE THE LAST MAINTENANCE REPORT:  
 (DO NOT INCLUDE SELF-ADMINISTERED TESTS)

REFUSALS	(0-.04) 0	(.05-.09) 0	(.10-.14) 0	(.15-.19) 0	OVER .19 0
----------	-----------	-------------	-------------	-------------	------------

LIST ANY NEW PARTS AND DESCRIBE ANY ALTERATION OR MODIFICATION THAT WAS MADE TO RESTORE THE INSTRUMENT TO OPERATE SATISFACTORILY AND WITHIN ESTABLISHED LIMITS (USE OTHER SIDE IF NECESSARY).  
 MEETS DOH Specs. Lo #13280, Bot. #79

<b>INSPECTING OFFICER</b>	
SIGNATURE <i>D. R. Reuter</i>	PRINT FULL NAME D. R. Reuter
TYPE II PERMIT NUMBER/EXPIRATION DATE 240106 03/11/2016	TELEPHONE NUMBER (816) 387-2345

RETURN COMPLETED REPORT TO THE: Breath Alcohol Program, MO Department of Health and Senior Services, Southeast District Office  
 2875 James Blvd.  
 Poplar Bluff, MO 63901



## GUTH LABORATORIES, INC.

690 NORTH 67th STREET • HARRISBURG, PA 17111-4511 • TELEPHONE: 717-564-5470

### CERTIFICATE OF ANALYSIS

Certified Alcohol Reference Solution for Simulator

Random Samples of Lot Number 13290 of Alcohol Reference Solution for Simulator were analyzed by gas chromatography on October 31, 2013, using a Perkin Elmer Gas Chromatograph Autosystem XL S/N: 610N9030209, and found to contain 0.1202% (w/vol) ethyl alcohol. The expiration date for this lot number is October 29, 2015 at 11:59 PM.

When used in a calibrated Simulator, operating at 34°C +/- .2°C, this solution will give a breath alcohol analysis instrument reading of 0.100 g/210L +/- 3%.

The alcohol and water used in this solution were free of test interfering substances.

Ted L. Pauley, President  
GUTH LABORATORIES, INC.

**NIST Traceability:**

Testing was conducted using Cerilliant Reference Standard lot number FN122211-02 whose values are traceable to NIST.

All balances are calibrated annually by an outside agency using NIST traceable weights. Calibration verification is done prior to each use utilizing NIST traceable weights.

Face This Side Down - This Edge In First

**BAC DataMaster  
Evidence Ticket**

MISSOURI STATE HIGHWAY PATROL  
BAC DATAMASTER SERIAL NUMBER 204145

01/30/15

ARREST TIME: 20:00  
SUBJECT NAME:  
RADIO/JOHN  
DOB: 01/02/70      SEX: M  
STATE/D.L.: MO/1234567890  
ARRESTING OFFICER:  
REUTER/DALE/R  
OFFICER I.D.: 0622  
TESTING OFFICER:  
REUTER/DALE/R  
OFFICER I.D.: 0622  
PERMIT NUMBER: 240106  
EXPIRATION DATE: 03/11/16  
MISCELLANEOUS DATA:  
RFI  
RFI

--- BREATH ANALYSIS ---

RADIO INTERFERENCE

Operator Signature



Face This Side Down - This Edge In First

# BAC DataMaster Evidence Ticket

MISSOURI STATE HIGHWAY PATROL  
BAC DATAMASTER SERIAL NUMBER 204145  
01/30/15


TESTING OFFICER:  
REUTER/DALE/R  
OFFICER I.D.: 0622  
PERMIT NUMBER: 240106  
EXPIRATION DATE: 03/11/16  
MISCELLANEOUS DATA:  
JAN TEST

--- SUPERVISOR MODE ---

BLANK TEST	.006	21:26
INTERNAL STANDARD	VERIFIED	21:26
EXTERNAL STANDARD	.100	21:26
BLANK TEST	.000	21:27
EXTERNAL STANDARD	.101	21:27
BLANK TEST	.000	21:28
EXTERNAL STANDARD	.101	21:29
BLANK TEST	.000	21:29

N = 3  
SIM. = .1  
AVG. = .1006

Operator Signature

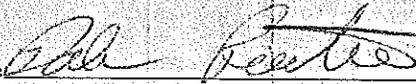

Face This Side Down - This Edge In First

# BAC DataMaster Evidence Ticket

MISSOURI STATE HIGHWAY PATROL  
BAC DATA MASTER SERIAL NUMBER 204145  
01/30/15  
21:19


--- DIAGNOSTIC CHECK ---

COMPUTER:	OKAY
PROGRAM (04-07-2009):	OKAY
HEATERS	
SAMPLE CHAMBER:	56c
FLOW DETECTOR:	OKAY
PUMP	
HIGH SPEED:	OKAY
DETECTOR:	OKAY
FILTERS:	OKAY
QUARTZ STANDARD:	OKAY
CALIBRATION:	OKAY

PRINTER TEST

!"#\$%&'()\*+,-./0123456789:;<=>?@ABCDEFGHI  
HIJKLMNOPQRSTUVWXYZ[\]^\_`abcde fghijklmnop  
qrstuvwxyz{|}~>

Operator Signature

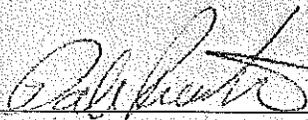



STATE OF MISSOURI  
DEPARTMENT OF HEALTH AND SENIOR SERVICES  
BREATH ALCOHOL PROGRAM



PERMIT  
TYPE II

DALE R REUTER

is hereby authorized to instruct and supervise operators, train instructors, inspect, calibrate, perform field service and repairs, and operate the following breath analyzer(s):

DATAMASTER, INTOX DMT

for the determination of the alcoholic content of blood from a sample of expired air. Permit issued under the provisions of sections 577.020 through 577.041, RSMo and 306.111 through 306.119 RSMo.

DATE 3/11/2014

NUMBER 240106

EXPIRES 3/11/2016


MO 577-0771 (6-10)

DIRECTOR OF STATE PUBLIC HEALTH LABORATORY

acting director

DIRECTOR OF DEPARTMENT OF HEALTH AND SENIOR SERVICES

LAD-4 (05-10)

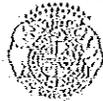

STATE OF MISSOURI  
DEPARTMENT OF HEALTH AND SENIOR SERVICES  
BREATH ALCOHOL PROGRAM

INSTRUMENT OPERATOR CARD

The named cardholder is authorized to operate an evidential breath alcohol instrument for the determination of the alcohol content in breath form of expired air in Missouri.



Operator: REUTER, DALE  
Permit No 240106  
Date issued 3/11/2014 Date Expires 3/11/2016