



MISSOURI DEPARTMENT OF HEALTH AND SENIOR SERVICES  
STATE PUBLIC HEALTH LABORATORY  
BREATH ALCOHOL PROGRAM  
**INTOX DMT MAINTENANCE REPORT**

REPORT #1

Complete this report at the time of the regular monthly preventive maintenance check (not to exceed 35 days).  
Complete this report whenever the instrument is serviced or repaired and whenever it is placed into service.  
Retain the original and send a copy within 15 days to the Breath Alcohol Program, DHSS.

INTOX DMT SN <b>500046</b>	NAME OF AGENCY <b>Missouri State Highway Patrol</b>	DATE OF INSPECTION <b>05/16/2016</b>
LOCATION OF INSTRUMENT (STREET AND CITY) <b>10 N.E. Tudor Road., Lee's Summit</b>		TIME OF INSPECTION <b>07:49:58</b>

CHECKLIST: Place a mark in the box by each item if found to be satisfactory or is operating within established limits. (Write in observed values where determined). Unmarked items must be corrected before using instrument.

**DIAGNOSTIC RECORD**

DATE AND TIME <u>05/16/2016 07:50:00</u>	<input checked="" type="checkbox"/> DETECTOR
<input checked="" type="checkbox"/> PROGRAM	<input checked="" type="checkbox"/> FILTER 1
<input checked="" type="checkbox"/> SAMPLE CHAMBER <u>48.8°C</u>	<input checked="" type="checkbox"/> FILTER 2
<input checked="" type="checkbox"/> BREATH TUBE <u>46.2°C</u>	<input checked="" type="checkbox"/> FILTER 3
<input checked="" type="checkbox"/> PUMP	<input checked="" type="checkbox"/> INTERNAL STANDARD

**BREATH ANALYZER ACCURACY STANDARDS**

SIMULATOR STANDARD  COMPRESSED ETHANOL-GAS MIXTURE

STANDARD SUPPLIER ILMO LOT # 25814080A3 EXP. DATE 10/05/2016

SIMULATOR TEMP (34°C ± 0.2°C) \_\_\_\_\_ SIMULATOR SN \_\_\_\_\_ SIMULATOR EXP DATE \_\_\_\_\_

**CALIBRATION CHECK - (ONLY ONE STANDARD IS TO BE USED PER MAINTENANCE REPORT)**  
Run three tests using a standard. All three tests must be within ±5% of the standard value and must have a spread of .005 or less. Mark the box corresponding to the standard being used.

0.10% STANDARD - MUST READ BETWEEN 0.095% AND 0.105% INCLUSIVE

0.08% STANDARD - MUST READ BETWEEN 0.076% AND 0.084% INCLUSIVE

0.04% STANDARD - MUST READ BETWEEN 0.038% AND 0.042% INCLUSIVE

TEST 1: 0.078      TEST 2: 0.078      TEST 3: 0.078

**PERFORM R.F.I. TEST**

INDICATE THE NUMBER OF BREATH TESTS IN THE FOLLOWING RANGES SINCE THE LAST MAINTENANCE REPORT:

REFUSALS: 0	0-.04: 3	.05-.09: 1	.10-.14: 4	.15-.19: 1	OVER .19: 2
-------------	----------	------------	------------	------------	-------------

LIST ANY NEW PARTS AND DESCRIBE ANY ALTERATION OR MODIFICATION THAT WAS MADE TO RESTORE THE INSTRUMENT TO OPERATE SATISFACTORILY AND WITHIN ESTABLISHED LIMITS (USE OTHER SIDE IF NECESSARY)

---



---



---




---

**INSPECTING OFFICER**

SIGNATURE 	PRINT FULL NAME <b>DANIEL D WOHLER</b>	
TYPE II PERMIT NUMBER <b>250317</b>	EXPIRATION DATE <b>12/28/2017</b>	TELEPHONE NUMBER

RETURN COMPLETED REPORT TO THE Breath Alcohol Program, MO Department of Health and Senior Services  
Southeast District Office  
2875 James Blvd, Poplar Bluff, MO 63901

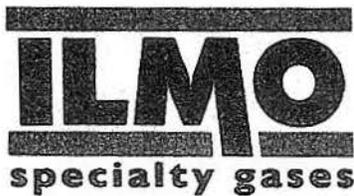

7 Eastgate Dr. • P.O. Box 790 • Jacksonville, IL 62651-0790  
217-245-2183 • Fax: 217-243-7634 • www.ilmoproducts.com

## Certificate of Analysis

**Certificate ID:** 7199  
**Part #:** BAC108L080T  
**Cylinder Size:** 108L  
**Lot Number:** 25814080A3  
**Expiration:** 10/5/2016


**0.080 BAC** (For the calibration of instruments used to determine breath alcohol concentration)


**Contents:** 108 Liters @ 1200 psig 70°F (21°C)

Component:	Concentration:	Accuracy:	Method:
Ethanol	208 ppm	+/- 0.002 or 2%	NDIR
Nitrogen	balance	BAC whichever is greater	

\*NIST Standard Reference Material  
Cylinder No. CCI4290 / Job No. 09160202  
Certified 212.8 µmol/mol Ethanol in Nitrogen  
for ILMO Products Co., Jacksonville, IL

Store in dry area, away from sources of heat, ignition  
and direct sunlight. Do not allow storage area to  
exceed 52 °C (125 °F).

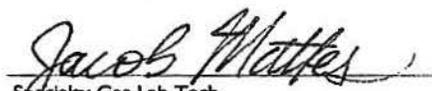  
Specialty Gas Lab Tech

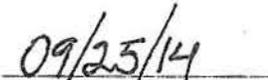  
Date

Distributed by: CMI Inc.  
316 East Ninth Street  
Owensboro, KY 42303  
Phone 866-835-0690  
[www.alcoholtest.com](http://www.alcoholtest.com)





STATE OF MISSOURI  
 DEPARTMENT OF HEALTH AND SENIOR SERVICES  
 BREATH ALCOHOL PROGRAM

2

**PERMIT  
 TYPE II**

**DANIEL WOHLER**

is hereby authorized to instruct and supervise operators, train instructors, inspect, calibrate, perform field service and repairs, and operate the following breath analyzer(s):

**INTOX DMT**

for the determination of the alcoholic content of blood from a sample of expired air. Permit issued under the provisions of sections 577.020 through 577.041, RSMo and 306.111 through 306.119 RSMo.

DATE 12/28/2015

NUMBER 250317

EXPIRES 12/28/2017

MC 585-07/1 (6-10)

DIRECTOR OF STATE PUBLIC HEALTH LABORATORY

DIRECTOR OF DEPARTMENT OF HEALTH AND SENIOR SERVICES

LAB-4 (RG-10)



**STATE OF MISSOURI**  
 DEPARTMENT OF HEALTH AND SENIOR SERVICES  
 BREATH ALCOHOL PROGRAM

**INSTRUMENT OPERATOR CARD**

*The named cardholder is authorized to operate an evidential breath alcohol instrument for the determination of the alcoholic content in breath form of expired air in Missouri.*



Operator **WOHLER, DANIEL**  
 Permit No **250317**  
 Date Issued **12/28/2015** Date Expires **12/28/2017**



MISSOURI DEPARTMENT OF HEALTH AND SENIOR SERVICES  
BLOOD ALCOHOL TEST REPORT - INTOX DMT

FORM #11


LOCATION OF INSTRUMENT 10 N.E. Tudor Road., Lee's Summit		INSTRUMENT SERIAL NUMBER 500046	DATE OF TEST 05/16/2016	TIME OF TEST 07:58:01
SUBJECT NAME SELF TEST			DATE OF BIRTH 01/01/2001	
SEX M	SUBJECT DRIVER'S LICENSE NUMBER 123456		STATE MO	
ARRESTING OFFICER D D WOHLER		ARRESTING OFFICER ID 1394		
OPERATOR DANIEL WOHLER		OPERATOR PERMIT 250317	PERMIT EXP DATE 12/28/2017	

OPERATIONAL CHECKLIST: INTOX DMT

- 1. Examination of mouth conducted. If any substance is observed or indicated to be present, the substance observed or indicated must be removed prior to starting the 15 minute observation period.
- 2. Subject observed for at least 15 minutes by DANIEL WOHLER. No smoking, oral intake or vomiting during this time; if vomiting occurs, start over with the 15 minute observation period.
- 3. Assure that the power switch is ON and the screen is displaying "Ready <Push Run>".
- 4. Press the Run button on the display screen.
- 5. Enter subject and officer information.
- 6. When display reads "Please Blow" and gives audible beep, insert mouthpiece and take the subject's breath sample.

SUBJECT TEST RESULTS

BLANK TEST	0.000	07:58
INTERNAL STANDARD	VERIFIED	07:59
SUBJECT SAMPLE (Vol=3.00L)	0.000	07:59
BLANK TEST	0.000	08:00

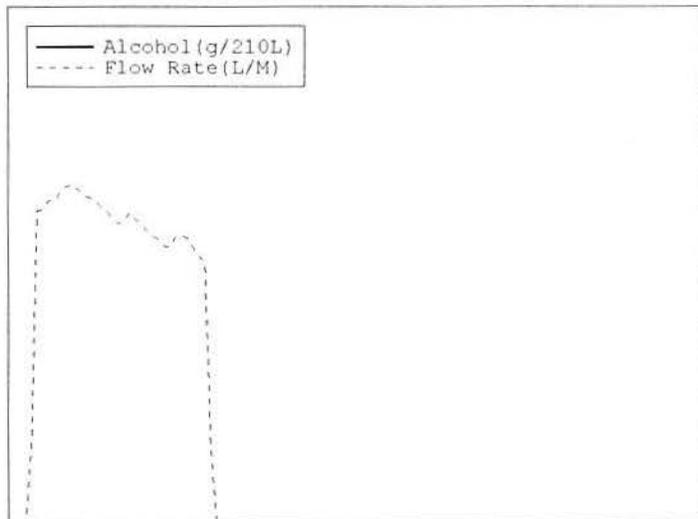

COMMENTS

SELF TEST FOR MAINTENANCE

CERTIFICATION BY OPERATOR

BAC  
0.000

As set forth in the rules promulgated by the Department of Health and Senior Services related to the determination of blood alcohol by breath analysis, I certify that:

- 1. There was no deviation from the procedure approved by the department.
- 2. To the best of my knowledge the instrument was functioning properly.
- 3. I am authorized to operate the instrument.
- 4. No radio transmission occurred inside the room where and when this test was being conducted.

SIGNATURE OF OPERATOR 	DATE 05/16/2016
WITNESS (IF ANY)	DATE