

RECEIVED

By Carol Day at 10:41 am, Mar 21, 2016



MISSOURI DEPARTMENT OF HEALTH AND SENIOR SERVICES
STATE PUBLIC HEALTH LABORATORY
BREATH ALCOHOL PROGRAM

INTOX DMT MAINTENANCE REPORT

REPORT #1

Complete this report at the time of the regular monthly preventive maintenance check (not to exceed 35 days).
Complete this report whenever the instrument is serviced or repaired and whenever it is placed into service.
Retain the original and send a copy within 15 days to the Breath Alcohol Program, DHSS.

INTOX DMT SN 500263	NAME OF AGENCY Troy Police Department	DATE OF INSPECTION 03/17/2016
LOCATION OF INSTRUMENT (STREET AND CITY) 800 Cap-A-Gris, Troy		TIME OF INSPECTION 14:50:40

CHECKLIST: Place a mark in the box by each item if found to be satisfactory or is operating within established limits. (Write in observed values where determined). Unmarked items must be corrected before using instrument.

DIAGNOSTIC RECORD

DATE AND TIME <u>03/17/2016 14:50:42</u>	<input checked="" type="checkbox"/> DETECTOR
<input checked="" type="checkbox"/> PROGRAM	<input checked="" type="checkbox"/> FILTER 1
<input checked="" type="checkbox"/> SAMPLE CHAMBER <u>48.7°C</u>	<input checked="" type="checkbox"/> FILTER 2
<input checked="" type="checkbox"/> BREATH TUBE <u>47.8°C</u>	<input checked="" type="checkbox"/> FILTER 3
<input checked="" type="checkbox"/> PUMP	<input checked="" type="checkbox"/> INTERNAL STANDARD

BREATH ANALYZER ACCURACY STANDARDS

<input checked="" type="checkbox"/> SIMULATOR STANDARD	<input type="checkbox"/> COMPRESSED ETHANOL-GAS MIXTURE
<input checked="" type="checkbox"/> STANDARD SUPPLIER <u>GUTH</u>	LOT # <u>15120</u> EXP. DATE <u>04/29/2017</u>
<input checked="" type="checkbox"/> SIMULATOR TEMP (34°C ± 0.2°C) <u>34.0</u>	SIMULATOR SN <u>SD2505</u> SIMULATOR EXP DATE <u>01/25/2017</u>

CALIBRATION CHECK - (ONLY ONE STANDARD IS TO BE USED PER MAINTENANCE REPORT)
Run three tests using a standard. All three tests must be within ±5% of the standard value and must have a spread of .005 or less. Mark the box corresponding to the standard being used.

- 0.10% STANDARD - MUST READ BETWEEN 0.095% AND 0.105% INCLUSIVE
- 0.08% STANDARD - MUST READ BETWEEN 0.076% AND 0.084% INCLUSIVE
- 0.04% STANDARD - MUST READ BETWEEN 0.038% AND 0.042% INCLUSIVE

TEST 1: 0.101	TEST 2: 0.101	TEST 3: 0.101
---------------	---------------	---------------

PERFORM R.F.I. TEST

INDICATE THE NUMBER OF BREATH TESTS IN THE FOLLOWING RANGES SINCE THE LAST MAINTENANCE REPORT:

REFUSALS: 1	0-.04: 4	.05-.09: 0	.10-.14: 0	.15-.19: 0	OVER .19: 1
-------------	----------	------------	------------	------------	-------------

LIST ANY NEW PARTS AND DESCRIBE ANY ALTERATION OR MODIFICATION THAT WAS MADE TO RESTORE THE INSTRUMENT TO OPERATE SATISFACTORILY AND WITHIN ESTABLISHED LIMITS (USE OTHER SIDE IF NECESSARY)

INSPECTING OFFICER

SIGNATURE 	PRINT FULL NAME BERNIE CLAYTON	
TYPE II PERMIT NUMBER 250107	EXPIRATION DATE 05/14/2017	TELEPHONE NUMBER 636-528-4725

RETURN COMPLETED REPORT TO THE Breath Alcohol Program, MO Department of Health and Senior Services
Southeast District Office
2875 James Blvd, Poplar Bluff, MO 63901



STATE OF MISSOURI
 DEPARTMENT OF HEALTH AND SENIOR SERVICES
 BREATH ALCOHOL PROGRAM

2

**PERMIT
 TYPE II**

BERNIE CLAYTON

is hereby authorized to instruct and supervise operators, train instructors, inspect, calibrate, perform field service and repairs, and operate the following breath analyzer(s):

DATAMASTER, INTOX DMT

for the determination of the alcoholic content of blood from a sample of expired air. Permit issued under the provisions of sections 577.020 through 577.041, RSMo and 306.111 through 306.119 RSMo.

DATE 5/14/2015

NUMBER 250107

EXPIRES 5/14/2017

DIRECTOR OF STATE PUBLIC HEALTH LABORATORY

DIRECTOR OF DEPARTMENT OF HEALTH AND SENIOR SERVICES



STATE OF MISSOURI
 DEPARTMENT OF HEALTH AND SENIOR SERVICES
 BREATH ALCOHOL PROGRAM

INSTRUMENT OPERATOR CARD

The named cardholder is authorized to operate an evidential breath alcohol instrument for the determination of the alcoholic content in breath form of expired air in Missouri.



Operator CLAYTON, BERNIE
 Permit No 250107
 Date Issued 5/14/2015 Date Expires 5/14/2017



GUTH LABORATORIES, INC.

590 NORTH 67th STREET • HARRISBURG, PA 17111-4511 • TELEPHONE: 717-584-5470

CERTIFICATE OF ANALYSIS

Certified Alcohol Reference Solution for Simulator

Random Samples of Lot Number 15120 of Alcohol Reference Solution for Simulator were analyzed by gas chromatography on May 4, 2015, using a Perkin Elmer Gas Chromatograph Autosystem XL S/N: 610N9030209, and found to contain 0.1209% (w/vol) ethyl alcohol. The expiration date for this lot number is April 29, 2017 at 11:59 PM.

When used in a calibrated Simulator, operating at 34°C +/- .2°C, this solution will give a breath alcohol analysis instrument reading of 0.100 g/210L +/- 3%.

The alcohol and water used in this solution were free of test interfering substances.

Ted L. Pauley, President
GUTH LABORATORIES, INC.

NIST Traceability:

Testing was conducted using Cerilliant Reference Standard lot number FN08051301 whose values are traceable to NIST.

All balances are calibrated annually by an outside agency using NIST traceable weights. Calibration verification is done prior to each use utilizing NIST traceable weights.



MISSOURI DEPARTMENT OF HEALTH AND SENIOR SERVICES
BLOOD ALCOHOL TEST REPORT - INTOX DMT

FORM #11


LOCATION OF INSTRUMENT 800 Cap-A-Gris, Troy		INSTRUMENT SERIAL NUMBER 500263	DATE OF TEST 03/17/2016	TIME OF TEST 15:00:31
SUBJECT NAME TEST TEST			DATE OF BIRTH 01/01/0001	
SEX M	SUBJECT DRIVER'S LICENSE NUMBER 0123456789		STATE MO	
ARRESTING OFFICER BERNIE CLAYTON		ARRESTING OFFICER ID 131		
OPERATOR BERNIE CLAYTON		OPERATOR PERMIT 250107	PERMIT EXP DATE 05/14/2017	

OPERATIONAL CHECKLIST: INTOX DMT

- 1. Examination of mouth conducted. If any substance is observed or indicated to be present, the substance observed or indicated must be removed prior to starting the 15 minute observation period.
- 2. Subject observed for at least 15 minutes by BERNIE CLAYTON. No smoking, oral intake or vomiting during this time; if vomiting occurs, start over with the 15 minute observation period.
- 3. Assure that the power switch is ON and the screen is displaying "Ready <Push Run>".
- 4. Press the Run button on the display screen.
- 5. Enter subject and officer information.
- 6. When display reads "Please Blow" and gives audible beep, insert mouthpiece and take the subject's breath sample.

SUBJECT TEST RESULTS

BLANK TEST	0.000	15:01
INTERNAL STANDARD	VERIFIED	15:01
SUBJECT SAMPLE (Vol=3.23L)	0.000	15:02
BLANK TEST	0.000	15:02

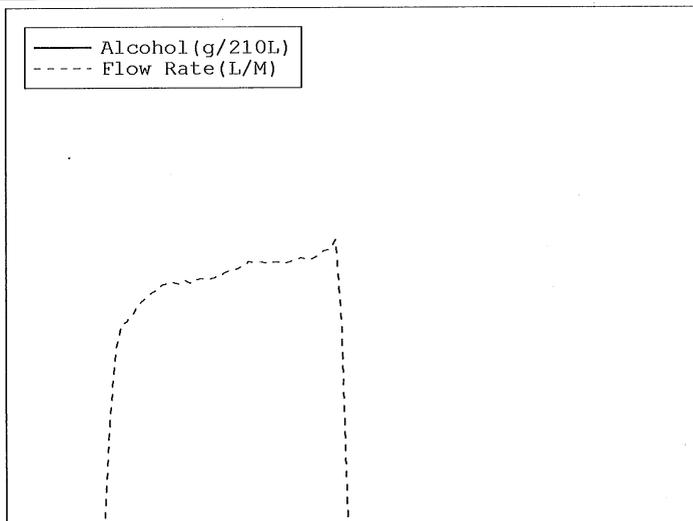

COMMENTS

CERTIFICATION BY OPERATOR

BAC
0.000

As set forth in the rules promulgated by the Department of Health and Senior Services related to the determination of blood alcohol by breath analysis, I certify that:

- 1. There was no deviation from the procedure approved by the department.
- 2. To the best of my knowledge the instrument was functioning properly.
- 3. I am authorized to operate the instrument.
- 4. No radio transmission occurred inside the room where and when this test was being conducted.

SIGNATURE OF OPERATOR 	DATE 03/17/2016
WITNESS (IF ANY)	DATE 03/17/2016