



ALCO-SENSOR IV WITH PRINTER MAINTENANCE REPORT

REPORT #7

Complete this report in duplicate at the time of the regular monthly preventative maintenance check, and whenever instrument is repaired. Send copy to Department of Health and Senior Services; retain original in department file.

ALCO SENSOR IV SN 030792	PRINTER SN 03A.2436.038	DATE OF INSPECTION 03/11/2020
LOCATION OF INSTRUMENT (STREET AND CITY) 891 TECHNOLOGY DRIVE, WELDON SPRING (TROOP C HQ)		TIME OF INSPECTION 2:44 pm

CHECKLIST: Place a mark in the box by each item if found to be satisfactory or if operating within established limits. (Write in observed values where determined.) Unmarked items must be corrected before using instrument.

DIGITAL READOUT (ALL ELEMENTS OPERATIONAL)

TEMPERATURE OF ALCO SENSOR (10°C - 40°C)

PRINTER WORKING PROPERLY

TIME AND DATE DISPLAYING PROPERLY

BREATH ALCOHOL ACCURACY STANDARDS

SIMULATOR SOLUTION COMPRESSED ETHANOL-GAS MIXTURE

STANDARD SUPPLIER REPCO MARKETING CO LOT # 19002 EXP. DATE 10/16/2021

SIMULATOR TEMPERATURE (34°C ± 0.2°C) 34.00 SIMULATOR SN MP2459 SIMULATOR EXP DATE 01/28/2021

CALIBRATION CHECK – (ONLY ONE STANDARD IS TO BE USED PER MAINTENANCE REPORT)

Run three tests using a standard solution. All three tests must be within ±5% of the standard value and must have a spread of .005 or less. Check the box corresponding to the standard solution being used. (PRINTOUT ATTACHED)

- 0.100% STANDARD - MUST READ BETWEEN 0.095% and 0.105% INCLUSIVE
- 0.080% STANDARD - MUST READ BETWEEN 0.076% and 0.084% INCLUSIVE
- 0.040% STANDARD - MUST READ BETWEEN 0.038% and 0.042% INCLUSIVE

TEST 1 ← .102

TEST 2 ← .102

TEST 3 ← .102

RFI DETECTOR OPERATING

INDICATE THE NUMBER OF BREATH TESTS IN THE FOLLOWING RANGES SINCE THE LAST MAINTENANCE REPORT: (DO NOT INCLUDE SELF-ADMINISTERED TESTS)

REFUSALS	0	(0-.04)	0	(.05-.09)	1	(.10-.14)	1	(.15-.19)	3	(OVER .19)	0
----------	---	---------	---	-----------	---	-----------	---	-----------	---	------------	---

List any new parts and describe any alteration or modification that was made to restore the instrument to operate satisfactorily and within established limits (use other side if necessary).

TIME ADJUSTED

INSPECTING OFFICER

SIGNATURE

PRINT NAME
A. MICHELS

TYPE II PERMIT NUMBER/EXPIRATION DATE
PERMIT #200009 EXPIRES 01/03/2022

TELEPHONE NUMBER
(636) 300-2800

Return completed report to the: Breath Alcohol Program, MO Department of Health and Senior Services, Southeast District Office
2875 James Boulevard
Poplar Bluff, MO 63901

AS IV Serial no: 030792
Version no: 532B

TEST RECORD 00219

Temp Date Time ^{g/} 210L

Air Blank:
03/11/20 14:46 .000
Calibration Check:
19 03/11/20 14:46 .102

Subject Name

Maint
Subject I.D.

Operator Name, I.D.

A. Michels #200009
Location

Troop C HQ
Mobile Unit

AS IV Serial no: 030792
Version no: 532B

TEST RECORD 00220

Temp Date Time ^{g/} 210L

Air Blank:
03/11/20 14:47 .000
Calibration Check:
20 03/11/20 14:47 .102

Subject Name

Maint
Subject I.D.

Operator Name, I.D.

A. Michels #200009
Location

Troop C HQ
Mobile Unit

AS IV Serial no: 030792
Version no: 532B

TEST RECORD 00221

Temp Date Time ^{g/} 210L

Air Blank:
03/11/20 14:49 .000
Calibration Check:
21 03/11/20 14:49 .102

Subject Name

Maint
Subject I.D.

Operator Name, I.D.

A. Michels #200009
Location

Troop C HQ
Mobile Unit

AS IV Serial no: 030792
Version no: 532B

TEST RECORD 00222

Temp Date Time ^{g/} 210L

VOID: RFI
12 03/11/20 14:50

Subject Name

Maint
Subject I.D.

Operator Name, I.D.

A. Michels #200009
Location

Troop C HQ
Mobile Unit



RepCo Marketing Co
3101-188 Stony Brook Drive
Raleigh, NC 27604
888-828-0227

CERTIFICATE OF ANALYSIS

MANUFACTURER AND SUPPLIER: RepCo Marketing Co.
LOT NUMBER: 19002
EXPIRATION DATE: October 16, 2021 at 11:59 p.m.

RepCo Marketing Co. certifies the following:

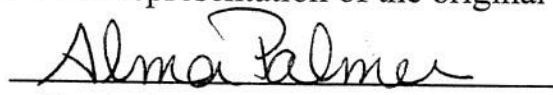
RepCo Marketing Co. prepared, tested and supplied Lot Number 19002 of Alcohol Certified Solution for simulators. This solution was manufactured and tested by RepCo Marketing Co., with confirmation by ISO 17025 and ISO 17034 accredited institution Alcohol Countermeasure Systems, using NIST standards. Random samples were analyzed by Alcohol Countermeasure Systems utilizing a gas chromatograph and found to contain .1231 gms/dl +/- .003 gms/dl wt/vol ethanol (95% Confidence).

The alcohol and distilled water used in the solution were found to be free of any interfering substance.

This solution will produce a vapor alcohol value of .100 +/- 3% gms/210L breath when heated to 34 Degrees Celsius +/- 0.2 Degrees Celsius in a simulator (95% Confidence).

The date of manufacture for this lot number is October 17, 2019 The expiration date for this lot number is October 16, 2021 at 11:59 p.m.

This document is a true representation of the original Certificate of Analysis.


Alma Palmer, Operations Manager
RepCo Marketing Co.



STATE OF MISSOURI
 DEPARTMENT OF HEALTH AND SENIOR SERVICES
 BREATH ALCOHOL PROGRAM



PERMIT
TYPE II
ADAM J MICHELS

is hereby authorized to instruct and supervise operators, train instructors, inspect, calibrate, perform field service and repairs, and operate the following breath analyzer(s):

ALCO-SENSOR IV WITH PRINTER

for the determination of the alcoholic content of blood from a sample of expired air. Permit issued under the provisions of sections 577.020 through 577.041, RSMo and 306.111 through 306.119 RSMo.

DATE **1/3/2020**

NUMBER **200009**

EXPIRES **1/3/2022**

DIRECTOR OF STATE PUBLIC HEALTH LABORATORY

DIRECTOR OF DEPARTMENT OF HEALTH AND SENIOR SERVICES



STATE OF MISSOURI
 DEPARTMENT OF HEALTH AND SENIOR SERVICES
 BREATH ALCOHOL PROGRAM

INSTRUMENT OPERATOR CARD

The named cardholder is authorized to operate an evidential breath alcohol instrument for the determination of the alcoholic content in breath form of expired air in Missouri.

Operator MICHELS, ADAM
Permit No 200009
Date Issued 1/3/2020 **Date Expires** 1/3/2022



RECEIVED

By Tracy Crews at 2:45 pm, Dec 03, 2019

APPROVED

By Stephen Wilson at 9:45 am, Dec 05, 2019



MISSOURI DEPARTMENT OF HEALTH AND SENIOR SERVICES
STATE PUBLIC HEALTH LABORATORY
BREATH ALCOHOL PROGRAM

APPLICATION FOR TYPE II PERMIT FOR OPERATION OF BREATH ALCOHOL ANALYZERS

THIS APPLICATION IS FOR <input type="checkbox"/> NEW PERMIT <input checked="" type="checkbox"/> RENEWAL		CURRENT PERMIT NUMBER AND EXPIRATION DATE 280044 01/18/2020	
PRINT FULL NAME Adam J. Michels		TITLE Trooper 1st Class	AGE 34
[REDACTED]		A disclosure concerning your SSN number is available at: http://www.health.mo.gov/lab/breathalcohol/	
DEPARTMENT OR TROOP MSHP Troop C		TELEPHONE (636) 300-2800	
BUSINESS ADDRESS (STREET, CITY, STATE, ZIP CODE) 891 Technology Drive, Weldon Spring, Missouri 63304			
EMAIL ADDRESS adam.michels@mshp.dps.mo.gov			

LIST ALL ORIGINAL TRAINING COURSES FOR OPERATION OF BREATH ANALYZERS
(Also, please place a checkmark beside ALL breath analyzer(s) for which you are requesting a permit.)

DATES OF COURSE	LOCATION OF COURSE	COURSE LENGTH (HRS.)	NAME & MODEL OF BREATH ANALYZER	PLACE A ✓ BESIDE INSTRUMENTS FOR WHICH YOU REQUEST	NAME OF INSTRUCTOR
July 2010	Training Academy	32	datamaster	<input type="checkbox"/>	Cummings
Feb 2016	Troop F HQ	8	Alco-Sensor-IV	<input checked="" type="checkbox"/>	Cleveland
5/23-6/1	Training Academy	40	Alco Sensor-IV (General)	<input checked="" type="checkbox"/>	Day
				<input type="checkbox"/>	

List the manufacturer and name of instruments for which you are currently performing maintenance reports on and the number of maintenance reports performed on EACH type in the last year.

MANUFACTURER AND NAME OF INSTRUMENT	NUMBER OF MAINTENANCE REPORTS	NUMBER OF SUBJECT TESTS
1. Intoximeters AS-IV W/ PRINTER	64 OK SGW	4 5 SELF-TESTS OK SGW
2.		
3.		

When adding a new instrument, you receive a new two (2) year permit. Therefore, normal renewal procedures apply for the instrument(s) on your current permit that you wish to transfer to the new permit. Disregarding these renewal procedures will result in a new permit for the new instrument only.

To renew a Type II Permit, the applicant shall have completed two (2) Maintenance Reports and shall have performed at least ten (10) tests on drinking subjects in the past year on each instrument for which renewal is requested. If these conditions are not met, or the permit has expired for more than thirty (30) days, the applicant shall perform two (2) Maintenance Reports and five (5) self-administered tests for each breath analyzer for which renewal is requested. Copies of the Maintenance Reports along with the Operational checklists and printouts for the five (5) self-administered tests shall accompany the application for renewal.

SIGNATURE OF APPLICANT 	DATE 11/27/2019
----------------------------	--------------------

RETURN COMPLETED APPLICATION TO THE: Breath Alcohol Program, Missouri Department of Health and Senior Services
Southeast District Office
2875 James Blvd.
Poplar Bluff, MO 63901