

RECEIVED

By Tracy Crews at 8:58 am, Aug 28, 2020



MISSOURI DEPARTMENT OF HEALTH AND SENIOR SERVICES
STATE PUBLIC HEALTH LABORATORY
BREATH ALCOHOL PROGRAM
INTOX DMT MAINTENANCE REPORT

REPORT #1

Complete this report at the time of the regular monthly preventive maintenance check (not to exceed 35 days).
Complete this report whenever the instrument is serviced or repaired and whenever it is placed into service.
Retain the original and send a copy within 15 days to the Breath Alcohol Program, DHSS.

| | | |
|--|--|----------------------------------|
| INTOX DMT SN 500194 | NAME OF AGENCY Canton Police Department | DATE OF INSPECTION 07/07/2020 |
| LOCATION OF INSTRUMENT (STREET AND CITY) 108 N 5th St, Canton, MO | | TIME OF INSPECTION 13:01:40 |

CHECKLIST: Place a mark in the box by each item if found to be satisfactory or is operating within established limits. (Write in observed values where determined). Unmarked items must be corrected before using instrument.

| | |
|--|---|
| <input checked="" type="checkbox"/> DIAGNOSTIC RECORD | |
| DATE AND TIME <u>07/07/2020 13:01:42</u> | <input checked="" type="checkbox"/> DETECTOR |
| <input checked="" type="checkbox"/> PROGRAM | <input checked="" type="checkbox"/> FILTER 1 |
| <input checked="" type="checkbox"/> SAMPLE CHAMBER <u>48.8°C</u> | <input checked="" type="checkbox"/> FILTER 2 |
| <input checked="" type="checkbox"/> BREATH TUBE <u>42.6°C</u> | <input checked="" type="checkbox"/> FILTER 3 |
| <input checked="" type="checkbox"/> PUMP | <input checked="" type="checkbox"/> INTERNAL STANDARD |

| | |
|---|--|
| BREATH ANALYZER ACCURACY STANDARDS | |
| <input checked="" type="checkbox"/> SIMULATOR STANDARD | <input type="checkbox"/> COMPRESSED ETHANOL-GAS MIXTURE |
| <input checked="" type="checkbox"/> STANDARD SUPPLIER <u>GUTH</u> | LOT # <u>20190</u> EXP. DATE <u>04/06/2022</u> |
| <input checked="" type="checkbox"/> SIMULATOR TEMP (34°C ± 0.2°C) <u>34.0</u> | SIM. SN <u>MP2113</u> SIM. NIST EXP DATE <u>01/06/2021</u> |

| |
|---|
| <input checked="" type="checkbox"/> CALIBRATION CHECK - (ONLY ONE STANDARD IS TO BE USED PER MAINTENANCE REPORT) Run three tests using a standard. All three tests must be within ±5% of the standard value and must have a spread of .005 or less. Mark the box corresponding to the standard being used. |
| <input checked="" type="checkbox"/> 0.10% STANDARD - MUST READ BETWEEN 0.095% AND 0.105% INCLUSIVE |
| <input type="checkbox"/> 0.08% STANDARD - MUST READ BETWEEN 0.076% AND 0.084% INCLUSIVE |
| <input type="checkbox"/> 0.04% STANDARD - MUST READ BETWEEN 0.038% AND 0.042% INCLUSIVE |

| | | |
|---------------|---------------|---------------|
| TEST 1: 0.100 | TEST 2: 0.100 | TEST 3: 0.100 |
|---------------|---------------|---------------|

| |
|---|
| <input checked="" type="checkbox"/> PERFORM R.F.I. TEST |
|---|

| | | | | | |
|--|----------|------------|------------|------------|-------------|
| INDICATE THE NUMBER OF BREATH TESTS IN THE FOLLOWING RANGES SINCE THE LAST MAINTENANCE REPORT: | | | | | |
| REFUSALS: 0 | 0-.04: 1 | .05-.09: 0 | .10-.14: 0 | .15-.19: 0 | OVER .19: 0 |

LIST ANY NEW PARTS AND DESCRIBE ANY ALTERATION OR MODIFICATION THAT WAS MADE TO RESTORE THE INSTRUMENT TO OPERATE SATISFACTORILY AND WITHIN ESTABLISHED LIMITS (USE OTHER SIDE IF NECESSARY)

MSC Lab
Cleaned Ir bench, cleaned filters in filter wheel, calibration.

| | | |
|---------------------------------|---------------------------------|----------------------------------|
| INSPECTING OFFICER | | |
| SIGNATURE | PRINT FULL NAME MATT B BBOND | |
| TYPE II PERMIT NUMBER 290214 | EXPIRATION DATE 09/19/2021 | TELEPHONE NUMBER 660-543-4597 |

| | |
|--------------------------------|---|
| RETURN COMPLETED REPORT TO THE | Breath Alcohol Program, Missouri Department of Health and Senior Services by mail, fax, or email |
|--------------------------------|---|



GUTH LABORATORIES, INC.

590 NORTH 67th STREET • HARRISBURG, PA 17111-4511 • TELEPHONE: 717-564-5470

CERTIFICATE OF ANALYSIS

Certified Alcohol Reference Solution for Simulator

Random Samples of Lot Number **20190** of Alcohol Reference Solution for Simulator were analyzed by gas chromatography on **April 8, 2020**, using a Perkin Elmer Gas Chromatograph Autosystem XL S/N: 610N9030209, and found to contain **0.1206%** (w/vol) ethyl alcohol. The expiration date for this lot number is **April 6, 2022** at 11:59 PM.

When used in a calibrated Simulator, operating at $34^{\circ}\text{C} \pm .2^{\circ}\text{C}$, this solution will give a breath alcohol analysis instrument reading of **0.100 g/210L \pm 3%**.


The alcohol and water used in this solution were free of test interfering substances.

Ted L. Pauley, President
GUTH LABORATORIES, INC.

NIST Traceability:

Testing was conducted using Cerilliant Reference Standard lot number FN02271802 whose values are traceable to NIST.

All balances are calibrated annually by an outside agency using NIST traceable weights. Calibration verification is done prior to each use utilizing NIST traceable weights.

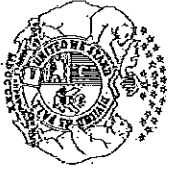

STATE OF MISSOURI
 DEPARTMENT OF HEALTH AND SENIOR SERVICES
 BREATH ALCOHOL PROGRAM



PERMIT
 TYPE II

MATT B BOND

is hereby authorized to instruct and supervise operators, train instructors, inspect, calibrate, perform field service and repairs, and operate the following breath analyzer(s):

INTOX DMT, INTOXILYZER 8000, INTOX EC/IR II, ASIV W/PRINTER

for the determination of the alcoholic content of blood from a sample of expired air. Permit issued under the provisions of sections 577.020 through 577.041, RSMo and 306.111 through 306.119 RSMo.

DATE 9/19/2019

NUMBER 290214

EXPIRES 9/19/2021

DIRECTOR OF STATE PUBLIC HEALTH LABORATORY

DIRECTOR OF DEPARTMENT OF HEALTH AND SENIOR SERVICES

LAB-4 (06-10)