

MISSOURI DEPARTMENT OF HEALTH AND SENIOR SERVICES STATE PUBLIC HEALTH LABORATORY

ALCO-SENSOR IV WITH PRINTER MAINTENANCE REPORT

REPORT #7

-FEFER							30.0000 - 100.00 (V.)
Complete this report in duplicate at the tir Send copy to Department of Health and S	ne of the regular mont	hly preventative	e mainten	ance check, and	d when	ever instrument	is repaired
ALCO SENSOR IV SN			Turierit ille	, 			
111781	NAME OF AGENC Warasaw Po	_Y lice Departme	nt			F INSPECTION 5/2024	
LOCATION OF INSTRUMENT (STREET AND CITY) 181 W. Harrison, Warsaw Mo					8:14	F INSPECTION DM	1
CHECKLIST: Place a mark in the box by ea where determined.) Unmarked items must	ach item if found to be s be corrected before us	satisfactory or if	operating	within establish	ed limit	s. (Write in obse	rved values
DIGITAL READOUT (ALL ELEMENTS							
☑ TEMPERATURE OF ALCO SENSOR	(10°C - 40°C)						
PRINTER WORKING PROPERLY							
☑ TIME AND DATE DISPLAYING PROP	ERLY						
BREATH ALCOHOL ACCURACY STAND	ARDS						
☑ SIMULATOR SOLUTION		СОМ	PRESSE	D ETHANOL-GA	S MIX	TUDE	
OTANDARD CURRUET Cuth I charateries							
Section 1 to the contract of t		_ LOT # <u>2339</u>	J	EXP. DATE	10/17/	2025	
SIMULATOR TEMPERATURE (34°C ±	0.2°C) 34.01	SIM. SN	MP6529	9 SIM. N	IST EX	P DATE 06/15	/2024
less. Check the box corresponding to th ☐ 0.100% STANDARD - MUST REA ☐ 0.080% STANDARD - MUST REA ☐ 0.040% STANDARD - MUST REA	D BETWEEN 0.095% D BETWEEN 0.076%	and 0.105% IN and 0.084% IN	CLUSIVE CLUSIVE	201			
TEST 1097	TEST 2 ☞ .097			TEST 3 🕶 .098	3		
☑ RFI DETECTOR OPERATING							
INDICATE THE NUMBER OF BREATH TE (DO NOT INCLUDE SELF-ADMINISTERED	STS IN THE FOLLOW	ING RANGES	SINCE T	HE LAST MAIN	TENAN	ICE REPORT:	
0		Ï				l	
REFUSALS 0 (004) 0	(.0509) 1	(.1014)	0	(0	(OVER .19)	1
List any new parts and describe any alterat established limits (use other side if necessa	ion or modification that	it was made to	restore th	ne instrument to	operat	te satisfactorily	and within
Instrument operating within established							
within established	DOTTIMING						
NSPECTING OFFICER	TOTAL CLASSIC	ESSENCE OF THE PERSON NAMED IN		COMPANIES OF			
SIGNATURE 1				PRINT NAME			
· attills			1,740	Tony Helms			
YPE II PERMIT NUMBER/EXTERATION DATE 240099 05/07/2026			TI	TELEPHONE NUMBER			
Return completed report to the: Breath A by mail,	lcohol Program, MO D ax, or email.	epartment of H	ealth and	Senior Services	s, South	neast District Of	fice
	7.70						

AS IV Serial no: 111781

Version: no: 532B

TEST RECORD 00217

Temp Date Time 210L

Air Blank:
05/05/24 20.16.000

Calibration Check:
25 00/05/24 20:16.097

Subject Name

Tost # 1

Subject I.D.

Test # 1

Operator Name, I.D.

T. Helms 240089

Location

181 W Harrison

Warsan

AS IV Serial no: 111781
Version no: 532B

TEST RECKRD 00216

Temp Cate Time 210L

Air Blank: 06/05/24 20:14 .000
Celibration Check: 25 06/05/24 20:14 .097

Subject Name
Test # Z

Subject I.D.
Test # Z

Operator Name, I.D.
T. Helms 240089

Location
18 W Herrison

AS IV Serial no: 111781
Version no: 532B

TEST RECORD 00218

Temp Date Time 210L

Air Blank: 06/05/24 20:17 000
Calibratica Check: 26 06/05/24 20:17 .098

Subject Name

Test # 3
Subject I.D.
Test # 3
Operator Name. I.D.

I. Helms 240099
Location
181 W Harrison

AS IV Serial no: 111781
Version no: 532B

TEST RECORD 00215

Temp Date Time 210L

VOID: RFI
12 06/05/24 20:19

Subject Name
RFE Test
Subject I.D.
RFI Lest
Operator Name. I.D.
T. Helms 240694
Location
LSI W Harrison



CERTIFICATE OF ANALYSIS

Certified Alcohol Reference Solution for Simulator

Random Samples of Lot Number 23390 of Alcohol Reference Solution for Simulator were analyzed by gas chromatography on October 18, 2023, using a Perkin Elmer Gas Chromatograph Autosystem XL S/N: 610N9030209, and found to contain 0.1207% (w/vol) ethyl alcohol. The expiration date for this lot number is October 17, 2025 at 11:59 PM.

When used in a calibrated Simulator, operating at 34°C +/- .2°C, this solution will give a breath alcohol analysis instrument reading of 0.100 g/210L +/- 3%.

The alcohol and water used in this solution were free of test interfering substances.

Ted L. Pauley, President GUTH LABORATORIES, INC.

NIST Traceability:

Testing was conducted using Cerilliant Reference Standard lot number FN03072301 whose values are traceable to NIST.

All balances are calibrated annually by an outside agency using NIST traceable weights. Calibration verification is done prior to each use utilizing NIST traceable weights.



STATE OF MISSOURI

DEPARTMENT OF HEALTH AND SENIOR SERVICES
BREATH ALCOHOL PROGRAM



PERMIT TYPE II

ANTHONY HELMS

is hereby authorized to instruct and supervise operators, train instructors, inspect, calibrate, perform field service and repairs, and operate the following breath analyzer(s):


ALCO-SENSOR IV WITH PRINTER

for the determination of the alcoholic content of blood from a sample of expired air. Permit issued under the provisions of sections 577.020 through 577.041, RSMo and 306.111 through 306.119 RSMo.

DATE5/7/2024	Mile Massur
	DIRECTOR OF STATE PUBLIC HEALTH LABORATORY
NUMBER 240099	
EXPIRES 5/7/2026	Davla J. Nichelson
MO 580.0771 (6.10)	DIRECTOR OF DEPARTMENT OF HEALTH AND SENIOR SERVICES

MO 580-0771 (6-10)

LAB-4 (R5-10)

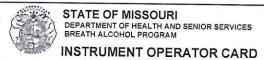

The named cardhoider is authorized to operate an evidential breath alcohol instrument for the determination of the alcoholic content in breath form of expired air in Missoudi.

Operator HELMS, ANTHONY

Permit No 240099

Date Issued 5/7/2024 Date Expires 5/7/2026

